
Woods Hole Oceanographic Institution

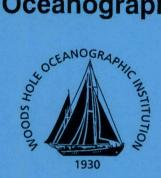

RAFOS Float Processing at the Woods Hole Oceanographic Institution

by

Christine M. Wooding
Heather H. Furey
Marguerite A. Pacheco

January 2005

Technical Report

Funding was provided by Woods Hole Oceanographic Institution.

Approved for public release; distribution unlimited.

WHOI-2005-02

RAFOS Float Processing at the Woods Hole Oceanographic Institution

by

Christine M. Wooding Heather H. Furey

Marguerite A. Pacheco

January 2005

Technical Report

Funding was provided by Woods Hole Oceanographic Institution.

Reproduction in whole or in part is permitted for any purpose of the United States Government. This report should be cited as Woods Hole Oceanog. Inst. Tech. Rept., WHOI-2005-02.

Approved for public release; distribution unlimited.

Approved for Distribution:

Nelson G. Hogg, Chair

Department of Physical Oceanography

ABSTRACT

This report and its accompanying webpage (http://www.whoi.edu/science/PO/rafos/) describe the processing steps for RAFOS floats, from subscribing to Service Argos to plotting the final data for a data report. The MATLAB-based tracking software ARTOA-II is described in detail. ARTOA-II allows the user to convert raw hexidecimal data to decimal format, calculate float clock drifts, edit raw data, and use the time-of-arrival data to calculate float trajectories. The intention is that this report will provide a handy reference and it will be kept from becoming out-of-date by updates to the relevant webpages.*

^{*} As of April 2005, ARTOA3 is available for download from http://www.whoi.edu/science/PO/rafos/. This manual is a necessary starting point for the software, but please visit the website for additional documentation before starting a project.

TABLE OF CONTENTS

ABSTRACT	. i
TABLE OF CONTENTS	iii
I. BACKGROUND	1
II. DATA ACQUISITION	1
1. Using Service Argos	
2. Acquiring data from Service Argos	
III. PROGRAM ARTOA-II	
1. Program Environment	
2. Preparing Parameters for Tracking	
3. Preparing Parameters for ARTOA-II	
4. Program Inputs	
5. Program Outputs	
6. Running Program ARTOA-II	
7. Reading Data into ARTOA-II	8
8. Editing Options	
9. Editing Temperature and Pressure	
10. Editing Times of Arrival	
11. Creating the INTerim file	
12. Tracking	
13. Error Messages	
14. Completed Trajectories	
IV. ACKNOWLEDGEMENTS	
V. REFERENCES	24
VI. GLOSSARY2	
VII. APPENDIX A: Description of input and output files for ARTOA-II	
1. Input Files	
2. Output Files	
VIII. APPENDIX B: Description of related programs	
1. Preparatory Program	
2. Plotting Programs	
3. Other Programs	
LIST OF FIGURES	
Figure 1. Main Toolbar	7
Figure 2. File Selection Window	8
Figure 3: Selected temperature window	12
Figure 4: Selected pressure window	
Figure 5: Unedited Times of Arrival window	
Figure 6: Editing-results window – selected TOAs	
Figure 7: Editing-results window – interpolated TOAs	

Figure 8: Tracking parameter window	18
Figure 9: Trajectory window	
Figure 10: Plot of velocities	
Figure 11: Magnified plot of Time of Arrivals	22

I. BACKGROUND

Oceanographers have used acoustically tracked sub-surface floats since the 1960's. There have been many improvements, but tracking them remains a challenge because the submerged locations are only available indirectly.

In the early 1980's, Bill Schmitz established a small group at WHOI dedicated to using acoustic floats to measure ocean currents. Tracking software was adapted by Breck Owens from a set of programs used by Tom Rossby at URI. During the next 14 years the group tracked around 150 SOFAR floats. In order to decrease the cost of float experiments, Rossby developed the RAFOS float, which is smaller and cheaper than SOFARs and could be used in larger numbers. As part of WOCE, Breck Owens and Jim Valdes developed an improved version, which was deployed in large numbers as part of the Brazil Basin Experiment starting in 1994. WHOI scientists have now tracked over 350 RAFOS floats, have 50 currently deployed, and have more planned to deploy in the future.

When we switched to RAFOS floats we modified the SOFAR processing and tracking software to track RAFOS floats. Recently (1997) it was decided to switch to a newer Matlab-based tracking scheme. ARTOA-II is a single integrated package of Matlab routines that makes it possible to track a float in a single session. It represents a complete overhaul of previous programs and has been developed in stages by Claudia Schmid (at IFM, Kiel), Martin Menzel (IFM, then IFREMER in Brest), and Olaf Boebel (IFM, URI) (Anderson-Fontana et al., 2001). Heather Furey and Roger Goldsmith (WHOI) have worked with Olaf Boebel (now at AWI) to be sure the package includes options such as least-square tracking and Doppler-shift calculations.

The current tracking program, ARTOA-II, takes the float from raw data through the final track. By having all the steps in a single program, one can go back and correct the track by making changes at any point in the process --- removing or replacing a bad point in the times-of-arrival (TOA) series; adding or subtracting a time-constant or drift to the float or any sound source. The results can be compared and the best one selected.

Modules have been written which permit data to be read into ARTOA-II directly as received from Service Argos. Previous versions of ARTOA-II included a module to read data from MARVOR floats (versions 1 and 2). At WHOI we have added an option to read data from Seascan DLD RAFOS floats.

II. DATA ACQUISITION

SOFAR floats transmitted a signal that was recorded at several Autonomous Listening Stations. Data tapes had to be recovered from the moored ALS and brought to the laboratory for processing. The RAFOS floats *receive* signals transmitted by moored sound sources (hence the acronym in-version). When the RAFOS float has terminated its mission, it surfaces and transmits the times it recorded sounds and the sounds' correlations with a standard pattern. This

transmission is heard by satellites that forward the information, ultimately, to the laboratory. Two satellite-service providers are Orbcomm (http://www.orbcomm.com) and Service Argos. Because Service Argos is used more frequently, we will discuss it here.

1. Using Service Argos

http://www.argosinc.com/getting start.htm*

The first step in using Service Argos is to make an application using the System Use Agreement form (http://www.argosinc.com/documents/SUA.pdf). Usually the description of the program can be easily abstracted from the proposal for the experiment. To the question "Is there a government interest in the collection of the data?" a standard reply is:

Government funded; Data utilized by government agencies.

Special requirements such as non-standard repetition rates can be requested. Include the technical page with the System Use Agreement (http://www.argosinc.com/documents/SUA-tech.pdf). This addresses questions like the brand, power-requirements, and model of the transmitter to be used.

The System Use Agreement should be submitted several weeks before first deployment. When it is approved, you will receive a "Program Review" with the program number, Argos ID numbers (decimal and hexadecimal), and username and password for on-line access, if requested.

At this point, a Technical File should be completed (http://www.argosinc.com/documents/technical_file.pdf). This covers details of data processing and transmission. If your experiment requires multi-satellite service (useful in areas of sparse coverage) or accurate time-coding (thousandths of seconds), request them in the Technical File. If Automatic Distribution Service is requested, an ADS Technical File (http://www.argosinc.com/documents/ADSTF.pdf should be included. This states which IDs should have data sent automatically, and how it is to be sent.

Once the platforms have been deployed, it is helpful to send a list of deployment locations to Service Argos (<u>useroffice@argosinc.com</u>). If the platforms will be submerged for some length of time, a predicted surfacing date should be included. Service Argos will enter the deployment location into a database, which should decrease the time it takes to accept locations for the platform. (One criterion for acceptance is "How fast did this platform travel from its last location?")

A Service Agreement form must be filled out each year (http://www.argosinc.com/documents-/SAxx.pdf). It ratifies the services needed and the method of payment. WHOI has an arrangement with Service Argos to use grant numbers directly, without requiring Purchase Orders.

The Argos User's Manual is available on-line at http://www.cls.fr/manuel.

^{*} This, and subsequent, Service Argos URL is for use within the United States. The alternate international site is http://www.cls.fr/html/argos/welcome_en.html.

The Argos Joint Tariff Agreement regulates use of Service Argos by scientists. NSF and ONR usually pay the daily charge per ID directly. This charge is negotiated under the JTA and the JTA Representative of Country annually requests a form estimating usage for the next calendar year. For more information, see:

http://www.ogp.noaa.gov/argos/index.htm

2. Acquiring data from Service Argos

Data can be acquired from Service Argos by any of several methods. One approach is to have a dedicated email address for an experiment, and use scripts to retrieve the data from the mail-server. Another is to use scripts to telnet to Service Argos and download the data. The latter is currently the less-expensive option. Service Argos will also ftp a file directly to a directory on your computer, although this can raise security issues.

Data may also be acquired via a web-interface from a PC (Windows OS only). The program for accessing the web-interface can be downloaded at http://argosdata.argosinc.com. Once installed, it permits the user to manage an account (request additional ID's, e.g.). This webpage can create plots and tables of data, as well as offer data in standard Argos formats. Although this is a quick way to check data (especially once a "customized download" has been set up), it is not useful for automating data acquisition.

Sample scripts for both email and telnet methods are available on our webpage. The sample scripts available for retrieving email were originally written at WHOI by Ellyn Montgomery. They have been modified by other users.

(http://www.whoi.edu/science/PO/rafos/argos/email.zip)

These sample scripts use Perl modules that can be downloaded from the website:

http://www.CPAN.org/

Some of the module names are:

POP3Client

IMAPClient

Telnet

The webpage for Perl is: http://www.perl.com. Perl is available for Windows computers as well as UNIX and Macintosh platforms. In addition, the telnet approach uses an Expect script for the actual telnet session. The sample scripts available on our webpage were written by Claudia Schmid at NOAA/AOML/PhOD (Miami).

(<u>http://www.whoi.edu/science/PO/rafos/argos/expect.zip)</u> Expect is available for Windows and UNIX platforms. Webpage: http://expect.nist.gov.

Subsequent discussion of Argos data assumes the data has been transmitted in Service Argos' "DS" format, using 32-bit variables. Samples of this format are in Appendix A.

III. PROGRAM ARTOA-II

1. Program Environment

ARTOA-II uses graphical user interfaces and menus for operator control. Because selection of times of arrival and tracking are done in a single program, the user can move back and forth between these two steps as needed. This facilitates correcting bad points at the TOA stage rather than in the output file, which discards less of the available information, and produces a more accurate track.

ARTOA-II uses a file of all the parameters for all the sound sources. The Parameter information for each float is in a separate file.

ARTOA-II uses Matlab Version 7.0 or higher and requires the following toolboxes, routines and files:

- The ARTOA-II package
- The Matlab Spline Toolbox
- The hydrographic toolbox version 1.4 written at the Woods Hole Oceanographic Institution by Rich Pawlowicz.
- The Mercator routines written at the *Institut fur Meereskunde* in Kiel by Wolfgang Erasmi.

The hydrographic toolbox and the Mercator routines come bundled with the ARTOA-II software. They can also be obtained with a browser from

http://www.ifremer.fr/lpo/eurofloat/software.html

2. Preparing Parameters for Tracking

Before ARTOA-II can be run, information must be collected on the sound velocity in the experiment area, and on the drifts of the clocks in the sources and floats. The module that converts the float data from hexadecimal to "rfb" format computes the float clock drift by comparing the float clock time to the time recorded by the Argos data system when the float surfaces, and inserts it into the appropriate header record.

Sound-source clock drifts are often measured directly at the time the source is retrieved, by comparing its clock to standard time. A dedicated listening device can be used and the results compared to standard time. A comparison can be made for several floats of the distance between a float's surfacing location and the source, and the last travel-time between them. Finally, sometimes a final offset will be derived by trial-and-error. The accuracy of this calculation is dependent on the accuracy of the sound velocity used. Care should be taken when extrapolating the float's location back to the time of the last TOA, as this also affects accuracy. The final offset is added to the initial offset and divided by the number of pongs during the deployment to calculate the drift.

Sound velocity can be calculated using ray-tracing programs, or by comparing the distance between a known float location (usually the launch location to minimize clock drifts) and source location and the travel-time between them. To use an *a priori* sound speed, specify the value in the Sound Source file and select 'Sound Source File' in the tracking-parameter window. Otherwise, ARTOA-II can compute the sound speed by several methods.

Another thing to consider are leap seconds – one-second adjustments that are made to keep atomic clocks matched to astronomical time. The difference between a submerged clock (uncorrected) and a standard clock (corrected) will be affected. All leap seconds are positive. The website below keeps track of leap seconds:

http://www.boulder.nist.gov/timefreq/pubs/bulletin/leapsecond.htm ARTOA-II calls 'leapsec.m' from 'uitoa.m' and applies leap-second corrections to the TOAs.

3. Preparing Parameters for ARTOA-II

Two modules, 'makeSOSOfile' and 'makeHDRfile', are included in the ARTOA-II package that build the sound source and RFB (rafos float begin) header input files necessary to run the ARTOA-II software. These modules exist independently from the ARTOA-II tracking software. The sound source file contains all metadata (e.g., position, drift) related to each source used in an experiment, and the header file contains all metadata associated with each float (all the lines in the RFB file to which the float data is appended).

In previous versions of ARTOA, the sound source and RFB files were created by modifying metadata and cutting and pasting new data into files, using sample files bundled with the software package as templates. These sample sound source and RFB files are still bundled with this release of the software, so users are welcome to continue cutting and pasting. The two Graphical User Interface (GUI) modules described below are useful for two reasons: (a) formatting errors are avoided by using the GUIs, and, more importantly, (b) the header file is necessary input for the ARGOS \rightarrow RFB data module within the ARTOA-II software if no RFB file exists.

Program to create sound source file

Typing 'makeSOSOfile' at the Matlab command line calls up a GUI that allows the user to create or modify a sound source file. The GUI contains spaces to enter all information listed and defined in Appendix A, under 'The sound source file'. Once a sound source file is named, that file is either initialized or opened. A sound source can be added or chosen from a pull down list (if opening an existing file), and that source entry may then be modified.

Program to acquire and format header information

Typing 'makeHDRfile' at the Matlab command line calls up a GUI that allows the user to create or modify a header file. The GUI contains spaces to enter all information listed and defined in Appendix A, under 'Main float file: rfbnnn.rfb/Header file: .hdr'. Once a float *.hdr file is named, that file is either initialized or opened for modification. Two pushbuttons: 'save

HDR file' and 'save RFB file' allow the user to create/save both types of file, with an additional text box that allows the user to enter the data file location for the RFB file.

4. Program Inputs

Please see Appendix A for the detailed description of the ASCII files mentioned below (i.e., not ITM).

- Initialization file, called 'artoa.ini' by default. The initialization file specifies the path to each kind of input or output file, and its extension. The default is assumed to reside in the same directory as the ARTOA-II software. To use a different file, invoke it on the command line (use complete path):
 >> artoa('-i','myfile.ini')
- Sound source file no restrictions on name; it is specified in the initialization file. This file contains all information needed for every sound source used.
- ARGOS file default extension .arg; the input data as it is received from Service Argos. Implemented for Marvor and Seascan DLD floats only.
- RFB file extension .rfb; the standard input file with unedited TOAs, temperatures and pressures, and a header specifying all needed information about this "cycle" (or mission) of the float.
- Header file extension .hdr; contains only the header of a RFB file.

Interim (ITM) file - extension .itm; this file is both an output and input file of ARTOA. It is in Matlab binary format, and stores all information read into or created by ARTOA at the point when the .itm file was made.

5. Program Outputs

- Surface (SFC) file extension .sfc; contains Argos locations for the transmitter.
- Status (STS) file extension .sts; contains system information about DLD that gets transmitted with the data.
- ITM file see above
- RFC file extension .rfc; the traditional output from ARTOA. It contains date, latitude, longitude, velocity, temperature, pressure and quality information. It also contains source and float parameters in a header.
- TRJ file extension .trj4; this is an abbreviated format for the trajectory information. It has a single-line header (float and cycle number) and records each have truncated Julian day, latitude, longitude, pressure and temperature, only.

6. Running Program ARTOA-II

The user must complete the following steps to calculate a float trajectory: (1) acquire the Times of Arrival (TOAs), correlation, and temperature and pressure information from an Argos or .rfb file; (2) edit the raw temperature and pressure values; (3) select the TOAs for the float and apply them to the correct sound sources; and (4) track the float and create a trajectory by converting the TOAs into distances between floats and sound sources.

Do not close a window by clicking at the upper corner of the figure. This is especially important for the main window of ARTOA-II. All editing will be lost if you close it by accident. (Matlab cannot control this window button.) Close the windows by using the "close" button, either included on the GUI figure or as a pull-down menu item under "File". When changing the float being tracked, we recommend that you exit ARTOA-II and execute the "clear all" command at the Matlab prompt, because some global data can remain when a new float is loaded.

Editing figures have "print" and "zoom out" buttons. The "print" button prints the figure area. An area of any plot may be enlarged by placing the cursor at any corner of that area, holding down the left button, and dragging the cursor in the direction which will enclose the desired area in the guide lines. When the left button is released, the screen will be redrawn with the new limits. The "zoom out" button returns the figure to its original limits. Trajectory figures can be blown up in the same way. Although there is no "zoom out" button, clicking the right mouse button will increase the area of the figure by steps back to the original limits.

Start Matlab. Be sure to establish the path to ARTOA-II, if needed: path(path,'c:\matlab\ARTOA\artoa2')

You may want to change directories, but most paths to input and output are handled by 'artoa.ini'.

From Matlab, execute 'artoa.m' by typing 'artoa' at the Matlab command line. There is a flash screen, and then just the main toolbar:



Figure 1. Main Toolbar.

on which only four buttons are "live", connecting to the following cascading menus:

File → Load → ARGOS file

- \rightarrow RFB file
- → Interim file

File → Save → TRJ4 File

- → RFC File
- → Interim File

File → Quit

Options -> reload data -> Reload ARTOA Init File - updates initialization information

- → Reload Sound Source Data updates sound source information during processing
- → Overload RFB File reloads the RFB header information for the float being processed. You may overload the header information even if you began with an .itm file this does **not** reload the rest of the rfb data.

Statistics - not implemented yet

Help → About ARTOA - gives flash-screen (with websites)

- → Float info gives all information in RFB header
- → Soso info gives all information in the sound-source file

Click on the File \rightarrow Load option and select your file type. When you select a kind of data to load, a file-selection window appropriate to your platform will be opened, and a specific file can be selected.

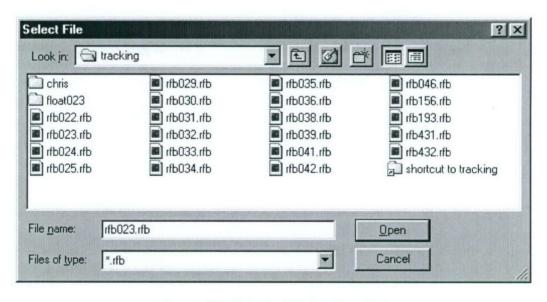


Figure 2. File Selection Window (on a PC).

7. Reading Data into ARTOA-II

Starting with Argos data

In an effort to handle all currently deployed floats, the modules read data transmitted under Service Argos' previous 20-bit-identifier (ID) format and the current 28-bit-ID format (which differs a bit depending on how many bits of ID the float actually uses). Determination of the kind of ID is made by looking for either "20" or "28" in the "-type" record of the header, and by examining the PTT decimal identifier. Marvors are recognized by "-type" being either 'MARVORv1' or 'MARVORv2'

The program expects a raw data file (.arg), and a file with the header information ARTOA-II needs (either a .hdr or previous .rfb file). This module can be run recursively, as more of the Argos messages are acquired. Output files include an rfb...rfb file containing the header (with the optional addition of the float clock-drift) and TOAs, correlations, temperatures, and pressures; a status file (.sts), containing two records per status message; and a file containing the locations calculated by Service Argos for the transmitter (.sfc). The default names for the latter two combine the "-floatname" from the header and the extension. The default name for the rfb file is the float number (numeric part of "-floatname") with rfb before and .rfb after.

ARTOA-II brings up a file-selection window ("Select Raw File") for the Argos data file. Select a file. Then comes a "Select Header File" window (".hdr" is the default). The path and filename of the selected files are echoed in the Matlab command window. The command window then requests four inputs:

- >> Do you want clock error [y/n]?
- >> Do you want to keep bad checks [y/n]?
- >> Enter new P-target or return:
- >> Enter new T-target or return:

If you want ARTOA-II to compute the float clock drift and insert it into the second "-offset" record (in place of "0.00"), answer "y" to question one. If you are interested in filling in data gaps with messages that fail the CRC test, answer "y" to the second question. If you want to override the pressure or temperature "target" (the values at the time the float released its weights, read from the first part of the status message), type that value in the command window; otherwise hit "return".

ARTOA-II will now report

>> Testing for RAFOS data file rfbXXX.rfb

If the file is found, the header and any pre-existing messages will be read and stored. When the raw data file has been read, the same filename will be re-used and old and new messages written to it. If a file by that name does not exist, a file-selection window will open ("Get old .rfb file"), and you may select an alternate file in rfb format. Click the "cancel" button in the file-selection window and ARTOA-II will report

>> Creating file rfbXXX.rfb

The same steps will now be followed for the status (.sts) and surface (.sfc) files. If files with the default names are found, they will be wound forward and new data appended. If not, you may select files with other names, or "cancel" the selection windows, and files with the default names will be created. In the case of the status file, three header lines will be written to it.

ARTOA-II will read through the Argos file, decoding TOAs, correlations and temperatures and pressures. When it reaches the end of the Argos raw file, it will report (in the command window)

- >> EOF on file xxxxxxxx
- If you requested clock-error calculation,
- >> Clock stats for 10 messages: mean -1.7257 std 0.00478 Where the numbers in italics are examples (10 is maximum number of input-messages used). Or
- >> *** No valid times for clock correction.

indicates no status messages or none passed check. If no messages were added during this run, you'll see

>> No new messages

Otherwise, ARTOA-II will report

>> Obtained 81 new messages

and list the raw message numbers in the order they were read.

Finally, ARTOA-II will display

>> Messages read: 3464 Passed check: 2281

(where "check" refers to either CRC or checksum) and

>> Normal end

Argos-input error messages

>> *** ERROR: number of Argos message records

[The Argos-position record is echoed.]

>> *** Position saved.

When a pass of raw Argos data has the wrong record count, ARTOA-II generates this message.

>> *** CLOCK STD. DEV. IS LARGE

This is generated if the standard error of the clock correction is greater than one.

Starting with an rfb...rfb file

The path and filename of the selected file are echoed in the Matlab command window.

>> filename =
 rfb023.rfb
pathname =
 E:\float\data\NBC\tracking\

8. Editing Options

At this point, the other two buttons on the main toolbar become "live":

Edit \rightarrow Times of arrival

- → Temperature
- → Pressure

Track → Track parameter

→ Trajectory output

Editing windows have an editing toolbar, labeled "data", at the right of the figure. The options are paired (pick and drop) (delete and undelete) (apply and withdraw) and refer to different steps in the process.

 $Pick \rightarrow polygon$

- \rightarrow point
- → semi-auto
- \rightarrow cancel

If "point" is selected, crosshairs appear, which can be moved with the mouse. Click the left mouse button when the crosshairs are in place. When a further action is specified, it will be done to the point nearest the intersection of the crosshairs. For "polygon", crosshairs also appear. By clicking the left button, you specify one vertex of a polygon, which can be used to enclose data

to which a next step will be done. Proceed with left clicks until the area is surrounded, then right-click to close the polygon. Any number of picks may be made before "apply"ing them to a variable. "Semi-auto" can only be used in editing TOAs, and is not yet implemented. The "cancel" button closes the pick pop-up menu.

Any "pick" can be undone by clicking on "drop". A second "drop" will undo the previous pick, and so on.

The "Apply" button works as follows in the different selection windows:

- In the Temperature and Pressure selection windows, the "Apply" button assigns the
 corrected Temperature and/or Pressure data series to the float you are working on for
 further processing.
- In the Times of Arrival selection window, the "Apply" button brings up a pop up menu listing all the available sound sources from the source file, so you can click on the sound source number that corresponds to the selected TOA data that you want to apply.

"Delete" hides selected points from further processing (use "undelete" to undo). For instance, if a point is "deleted", and then surrounded by a polygon that is "applied", the deleted point will be omitted from the selected data. Deleted points turn gray. Applied points turn white. The objective is to have all and only the good values turned white.

"Withdraw" resets points to their initial state and only works on points that have been selected (and applied). No matter how few points one wishes to withdraw, always use the <u>polygon</u> to identify them, not "point".

9. Editing Temperature and Pressure

Because the routine to calculate the nominal arrival times of sound signals at launch and surface times may use the float's temperature and pressure to calculate sound speed, it is recommended that the temperature and pressure records be edited first.

Click on Edit → Temperature and an editing window will open. The experiment name, float identification and selected variable are noted at the top of the plot. The x-axis is time in truncated Julian days labeled 'Message Date' and the y-axis is temperature in degrees centigrade labeled 'Temperature [C]'. Values are shown in yellow. Matlab now controls the window toolbar, with the exception of the Show button.

Show → Data → all temperature (the default)

→ selected temperature

Show → Grid - toggles whether the grid is visible or not

The "Shift" button is used to handle rollover problems in the floats. Rollovers occur because the temperatures and pressures are truncated before they are stored. ARTOA-II uses the "targets" stored in the status files or your input targets to move the truncated values to the correct range. Occasionally, temperatures or pressures vary over so wide a range that a single target

doesn't suffice. If this data includes useful values, it must be selected and shifted back to be valid. When the "shift" button is clicked, a request for number of degrees or meters to be added to shift the selected data back in line appears in the Matlab command window. Once you type in the answer, the selected points are moved back in line on the screen. Then the useful values need to be re-selected and applied. Points left unselected and unapplied (i.e. yellow) will not be saved in the edited temperature record; it is not necessary to delete a point to exclude it from the final record.

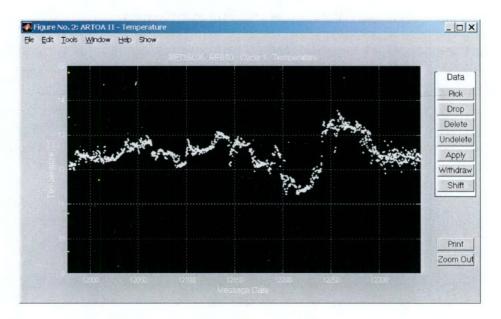


Figure 3: Selected temperature window (good values are white). N.B.: Before selection, all points are yellow.

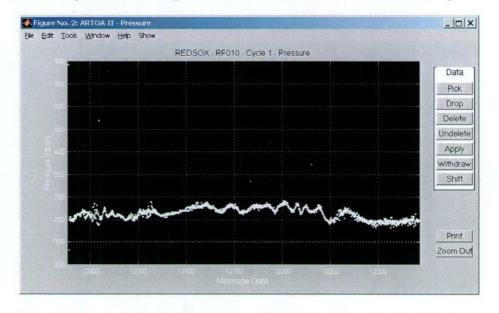


Figure 4: Selected pressure window (good values are white). N.B.: Before selection, all points are yellow.

After selecting and applying the desired temperature values, it is a good idea to look at "selected temperature" (Figure 3) before leaving the window as a check that you have what you

wanted. Use File \rightarrow Close to close the figure. If data is missing, return to the "all temperature" window to add it.

Click on Edit \rightarrow Pressure and another editing window will open (Figure 4). It works just like the temperature window. The y-axis is pressure, increasing toward the bottom of the plot labeled 'Pressure [dbar]'. Again, be sure to use File \rightarrow Close to close the figure.

Now is a good time to save your work by clicking File \rightarrow Save \rightarrow Interim file.

N.B.: at least FOUR TOA values must be selected and assigned to a source before an rfcnnn.rfc file can be created.

10. Editing Times of Arrival

Click on Edit \rightarrow Time of Arrivals and a more complicated editing window will open. All times of arrival heard by the float will be displayed at once, represented by diamonds. The color intensity of the diamonds depends upon their correlation height (e.g., yellow for low and red for high). The side toolbar for TOAs differs from that for temperature and pressure: the header "Source" has been inserted before Apply and Withdraw. When user clicks "Apply", a subwindow opens which offers a button for each source in the source file and a "cancel" button. By clicking on a particular source, currently selected TOAs are assigned to that source.

In the TOA selection window, the experiment name, float identification and selected variable are noted at the top of the plot (Figure 5). Both axes of the TOA window represent time: the x-axis is time in truncated Julian days (labeled 'Message Date') that represents the float mission duration, and the y-axis represents the time from the opening of the float's first listening window until the close of its last listening window of a cycle, and is labeled 'TOA [s]'. Matlab now controls the window toolbar, with the exception of the "Show" button.

The TOA window includes additional information: The predicted point at which a given source would have been heard at the start and end of the float mission is marked at each y-axis (red letters, in this case, red numbers, in other cases, depending on how source is named in sound source file). Identification of a source is only given if the source was operating at the start (or end) of the float mission. Vertical dashed lines indicate the start or end of a source during the float's mission, with source identified at top. Vertical solid lines mark the start (down-arrow) and end (up-arrow) of the float's mission. Horizontal lines separate the listening windows.

For the TOA window, the choices for the "show" button are:

Show → Data → All TOA - the default

- → Data → Selected TOA
- → Data → Interpolated TOA
- \rightarrow Grid
- → Sound Speed brings up the Tracking Parameter window (when needed)

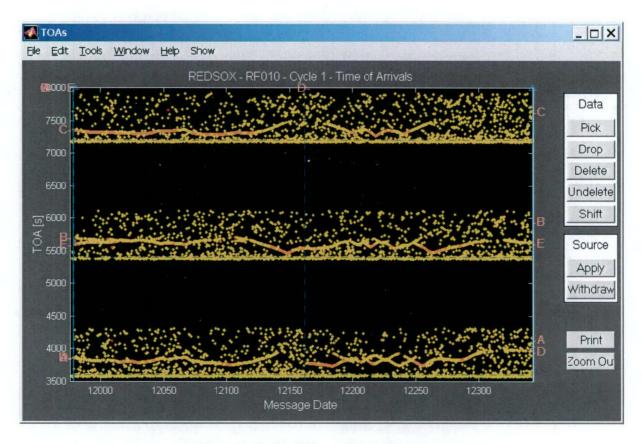


Figure 5: Unedited Times of Arrival window.

Choose Show \rightarrow Data \rightarrow All TOA from the cascading menu and then select and apply the TOA values of your choice for each sound source using the appropriate buttons from the side toolbar labeled "Data" ("pick", "drop", etc., described above). Use the "zoom" feature to permit working on one listening window at a time (See Figure 11 for an example of a magnified view of a TOA-editing window.). You can also use the Show \rightarrow Grid toggle to apply a grid to the TOA plot, which will help to identify the correct start and end Julian days of each sound source.

The correlation range of the float is specified in the header information of the 'rfbnnn.rfb' file – this controls the color codes in the TOA-editing figure. The colors themselves are set in Matlab routine 'uitoa.m'.

A quick method for selecting TOAs in "tidy" data is to pick several overlapping polygons and then "apply" them all to a source. However, if you have <u>overlapping</u> sources in the TOA window, take care to pick **only** those points specific to the current source; previous application, changing the point's color to white, will not preclude the point from being applied to a second source. In the future, when "Semi-auto" is implemented, it will be a quick way to select TOAs. You will be able to use the crosshairs to select a point at the start of the sound-source record and ARTOA will try to select the time of arrivals automatically.

The "Shift" button is used to handle rollover problems in the TOAs. Rollovers occur when TOAs from a sound source are heard in a window after the window in which the sound source pongs. Because the initial 80 seconds of the listening buffer (the interval required to hear the

signal from a source) is not overwritten, some TOA data from window 3 can be seen at the start of window 1, etc. If this data includes useful TOAs, it must be selected and shifted back in time to be valid. When the "shift" button is clicked, a request for number of seconds to be added to shift the selected data back in line appears in the Matlab command window. Once you type in the seconds to be added for the shift, the selected points are moved back in line on the screen. Then the useful TOAs need to be re-selected and applied to the correct sound source. For example, when a float's TOAs rolled over from window 2 into window 3 in an NBC DLD2 float, then three minutes (the difference between the 27 minutes the window was open and the 30 minutes between windows) was subtracted or (-180) seconds was added to "shift" them back into line.

Another application for the "shift" button occurs when the TOAs roll over within a window. The maximum value of a TOA represented by 12 bits is 4096, which converts to 1259 seconds or 21 minutes when the conversion factor is .3075 seconds and to 12.6 minutes when fast sources are used (.1846). The windows in the NBC DLD2 RAFOS floats, for example, were set to be open for 27 minutes; this meant that the TOAs in the first 6 minutes or 361 seconds of the window were ambiguous. When the TOAs in this experiment rolled over in the same window (with no window change), 21 minutes or 1260 seconds were added to "shift" them back into line. In this case, the modulo number of seconds must be added to the rolled-over values (and they must be re-selected and applied to a source).

When you hit the "shift" button, the Matlab command window displays these questions: >> Please enter by how many seconds the data shall be shifted:

>> Please indicate if the cycle needs to be shifted [y/n]: The second question should be answered "y" only in the case where a TOA has rolled over from the last window to the first window. This means the cycle of the TOA should change (e.g., a) date-change in a 24-hour float).

Show \rightarrow Data \rightarrow Selected or Interpolated TOA displays all the selected TOAs in a format similar to the TOA-editing window (Figure 6): the color intensity of the symbols varies with correlation height, but each sound source is differentiated by a different symbol (asterisk, circle, etc.). Any interpolated points are white (Figure 7). This is an opportunity to check that TOAs have been attached to the correct sound source. These figures also display the start and end times for each source in truncated Julian day. These values are used in specifying which combinations of sources are to be used for tracking different intervals of the float-mission. The default, linear-interpolated data, will be displayed if no change has been made to the Tracking Parameter window. Note: the Selected or Interpolated TOA windows are editing windows, and you can withdraw selected TOAs at this point. To add a point, it is necessary to return to the "All Data" window (Figure 5), where selected and unselected points can be seen. Use "polygon" to select any additional points, then "apply" them.

If TOAs were applied to the **wrong** sound source, they can be corrected by using the Data toolbar option buttons. Use the "Pick \rightarrow polygon" buttons to select the data, and the "Withdraw" button to reset the TOAs back to their raw data values. It is important that you use the "**polygon**" button to select the data when withdrawing points. Then reselect the TOAs and apply them to the correct sound source.

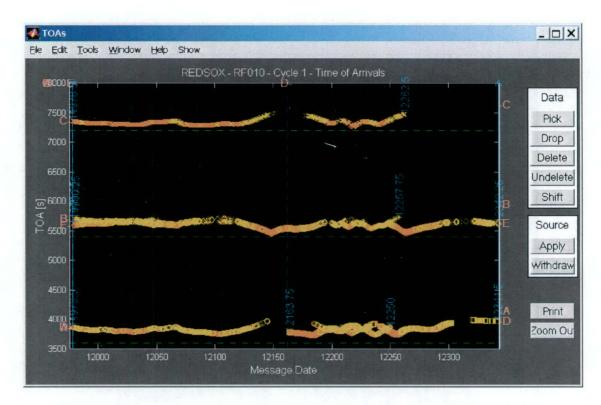


Figure 6: Editing-results window - selected TOAs. Note different symbol for each source.

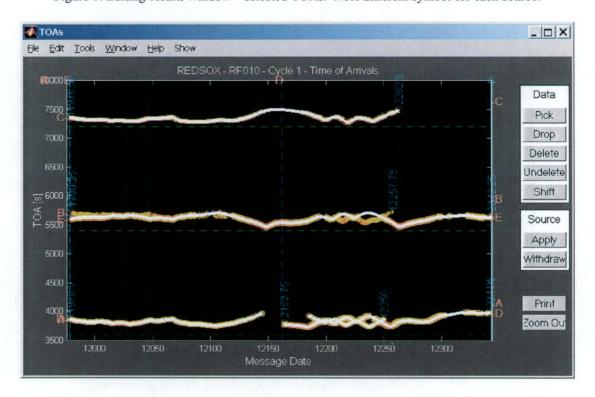


Figure 7: Editing-results window – interpolated TOAs.

signal from a source) is not overwritten, some TOA data from window 3 can be seen at the start of window 1, etc. If this data includes useful TOAs, it must be selected and shifted back in time to be valid. When the "shift" button is clicked, a request for number of seconds to be added to shift the selected data back in line appears in the Matlab command window. Once you type in the seconds to be added for the shift, the selected points are moved back in line on the screen. Then the useful TOAs need to be re-selected and applied to the correct sound source. For example, when a float's TOAs rolled over from window 2 into window 3 in an NBC DLD2 float, then three minutes (the difference between the 27 minutes the window was open and the 30 minutes between windows) was subtracted or (-180) seconds was added to "shift" them back into line.

Another application for the "shift" button occurs when the TOAs roll over within a window. The maximum value of a TOA represented by 12 bits is 4096, which converts to 1259 seconds or 21 minutes when the conversion factor is .3075 seconds and to 12.6 minutes when fast sources are used (.1846). The windows in the NBC DLD2 RAFOS floats, for example, were set to be open for 27 minutes; this meant that the TOAs in the first 6 minutes or 361 seconds of the window were ambiguous. When the TOAs in this experiment rolled over in the same window (with no window change), 21 minutes or 1260 seconds were added to "shift" them back into line. In this case, the modulo number of seconds must be added to the rolled-over values (and they must be re-selected and applied to a source).

When you hit the "shift" button, the Matlab command window displays these questions: >> Please enter by how many seconds the data shall be shifted:

>> Please indicate if the cycle needs to be shifted [y/n]: The second question should be answered "y" only in the case where a TOA has rolled over from the last window to the first window. This means the cycle of the TOA should change (e.g., a date-change in a 24-hour float).

Show \rightarrow Data \rightarrow Selected or Interpolated TOA displays all the selected TOAs in a format similar to the TOA-editing window (Figure 6): the color intensity of the symbols varies with correlation height, but each sound source is differentiated by a different symbol (asterisk, circle, etc.). Any interpolated points are white (Figure 7). This is an opportunity to check that TOAs have been attached to the correct sound source. These figures also display the start and end times for each source in truncated Julian day. These values are used in specifying which combinations of sources are to be used for tracking different intervals of the float-mission. The default, linear-interpolated data, will be displayed if no change has been made to the Tracking Parameter window. Note: the Selected or Interpolated TOA windows are editing windows, and you can withdraw selected TOAs at this point. To add a point, it is necessary to return to the "All Data" window (Figure 5), where selected and unselected points can be seen. Use "polygon" to select any additional points, then "apply" them.

If TOAs were applied to the **wrong** sound source, they can be corrected by using the Data toolbar option buttons. Use the "Pick → polygon" buttons to select the data, and the "Withdraw" button to reset the TOAs back to their raw data values. It is important that you use the "**polygon**" button to select the data when withdrawing points. Then reselect the TOAs and apply them to the correct sound source.

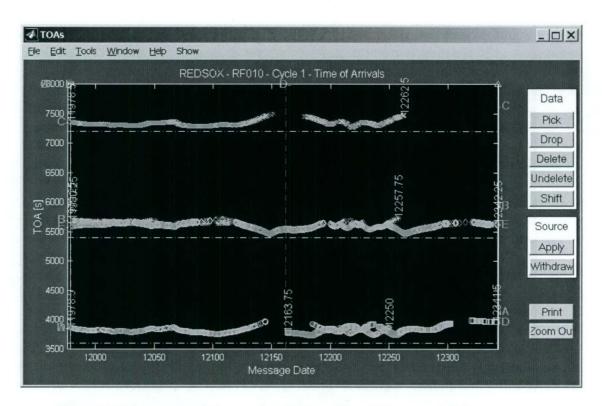


Figure 6: Editing-results window – selected TOAs. Note different symbol for each source.

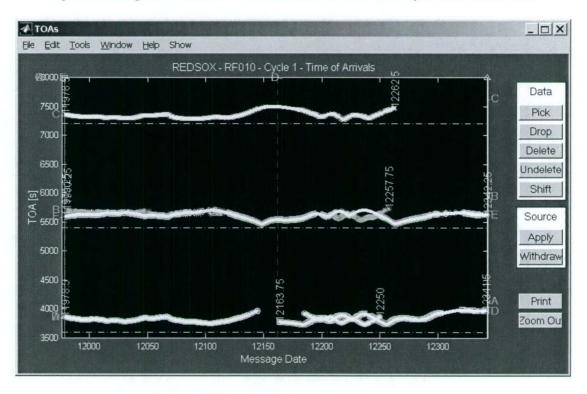


Figure 7: Editing-results window - interpolated TOAs.

11. Creating the INTerim file

Whenever you take a break in running ARTOA, it is a good idea to save your work in an interim, Matlab-binary file. The file-selection window should give you flexibility in naming files, but the extension should be .itm, to insure that it will be listed if you want to load it. The "standard" name is 'rfnnn.itm'. It is important that the interim file name be five characters in length with the float number in positions 3:5, because the ARTOA program assumes this in naming the final tracked 'rfcnnn.rfc' file. You should **always** create an interim file on completion of TOA selection, or information will be lost. A **backup** copy of the .itm file will be useful on the rare occasions when an .itm file gets corrupted. You can save the currently selected values by clicking on File from the ARTOA main toolbar: File → Save → Interim File

An itm-file can be viewed by saying "load filename" (no extension) at the Matlab prompt. The contents can be listed by typing "whos" at the prompt (or in a Matlab workspace window), and a specific item by typing its name.

You don't have to wait until all Temperatures, Pressures and TOAs have been selected and applied to save the data. However, once you have edited the Temperature and Pressure values, you must select and apply at least four TOA values to a sound source before you save to an interim 'rfnnn.itm' Matlab binary file or your file will be corrupted. The 'rfnnn.itm' file once created can also be used as an input file and updated throughout the processing.

12. Tracking

When all useful TOAs have been selected and applied to the correct source name, the Tracking Parameter window gives you control over the next step. If the Tracking Parameter window is closed, it can be opened clicking "Track \rightarrow Track parameter" on the ARTOA toolbar. The Tracking Parameter window is labeled with the experiment and float ID. Select tracking method, Doppler shift or none, and sound-velocity calculation. You can select **one** interpolation algorithm (for input) and **two** interpolation intervals (the interval for input is in days, that for output in hours). See Appendix A for a discussion of interpolation applied to output parameters.

Tracking Method → Circular – location by intersecting circles of constant distance from sources

- → Hyperbolic location by intersecting spheroidal hyperbolas representing points of equal difference in distance from sources
- → Least Square minimizes the sum of the squares of the residuals of estimated locations (default)

Circular and hyperbolic use the local routine 'xnavai.m' and a maximum of two sources (circular) or three sources (hyperbolic) to calculate a location. If hyperbolic method is chosen, yet only two sources are available, then program defaults to the circular method. least square uses 'ls converge.m' and a maximum of three sources.

The Doppler correction algorithm uses a centered-difference method to correct the TOAs for the distortion caused by the speed at which sound is traveling (default is no correction).

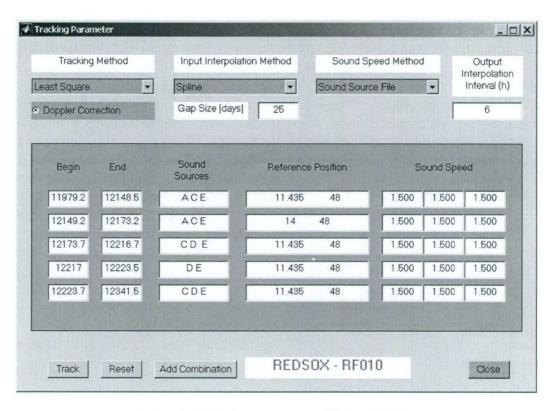


Figure 8: Tracking parameter window (filled in).

Input Interpolation Method → None

- → Linear straight-line interpolation is used ('interp1.m' default)
- → Spline a cubic spline is applied ('spline.m')
- → Cubic a cubic convolution interpolation is applied ('interp1.m')

These two routines are part of the Matlab library. Please see Matlab documentation for more information.

Gap Size (days) - integer value - the limit in days for TOA interpolation (default is zero). See Figure 7.

Sound Speed Method \rightarrow Del Grosso – (default) uses the Del Grosso equation in the Matlab routine

- 'soundspeed.m' to compute sound velocity from mean temperature and pressure (Del Grosso, 1974).
- \rightarrow Linear calculates the speed of sound by the linearized expression : sound velocity = (average T 7) *0.0011 + 1.49
- → Sound Source file each source must be assigned a velocity in the input file
 - → Levitus sound velocity computed from climatological data (Boyer and Levitus, 1994; Levitus *et al.*, 1998) (Not implemented; defaults to 1500 m/s)

Output Interpolation Interval (h) - integer value in hours (default is "schedule", or input interval)

Now select the sound-source combinations and intervals. Start and end are given in truncated Julian day (either integer or one decimal place), labeled 'Message Date' in editing figures. There can be gaps between the end of one interval and the start of the next, but overlap of two intervals is not permitted. List the sound sources as labeled on the TOA window, separated by spaces. Either two or three sources may be used for an interval. Use the "Add combination" button at the bottom to get another blank line. You can divide the mission into an unlimited number of intervals.

The reference point initially defaults to the launch position of the float. Other positions can be used, and sometimes are needed to overcome a baseline reflection.

You must enter the message date numbers and the sound sources to be used before you choose the 'Sound Source File' option for the sound speed method. If you do not, the following error message appears in the Matlab command window.

>> No Sound Source selected. Sound Speed estimation method not applicable. Default to Del Grosso.

If everything is set, the sound-velocity value for each source will appear in the corresponding block.

"Reset" will empty all combination lines and return other choices to their default values.

"Close" to close window. Note that closing the window does not clear all values.

When all parameters have been entered, click the "track" button to begin tracking. At this point, you have the option of entering additional clock corrections for the float and the sources in the Matlab command window. Type in any additional float offset at the beginning or end of the float mission. Note that an additional float offset at the end will be expressed as a drift throughout the mission. Enter any additional offsets for sound sources. These will be added to the entire source record. Give any necessary corrections in seconds and decimal part or press the <enter> button for no correction.

- >> Add additional float offset at the beginning: <ENTER>
- >> Add additional float offset at the end: <ENTER>
- >> Add additional offset for Sound Source B1: <ENTER>
- >> Add additional offset for Sound Source 69: <ENTER>
- >> Add additional offset for Sound Source 77: <ENTER>
- >> Add additional offset for Sound Source 404: -3.0

Once you have answered the above questions in the Matlab command window the float trajectory will be calculated and displayed in the Trajectory Output window. While ARTOA-II is calculating the track, it outputs a two-letter code to the screen, 'ls' for least square, 'hy' for hyperbolic, and 'ci' for circular.

13. Error Messages

Multiple TOAs in sound source 77 at following times: 11430.5 11522.2 11574

Use Edit \rightarrow Time of Arrivals to return to the TOA editing window and withdraw the incorrect TOA(s), using the "polygon" option. Do this for each source and Julian day. Then hit "Track" in the Tracking Parameter window again.

No sound sources selected

- a) No record numbers were specified before "Track" button was pushed.
- b) The button to specify sound-source method was pushed before sound-source combinations were selected.

No convergence - this depends on the tracking method selected: Both circular and hyperbolic tracking use a limit of 20 iterations; least-square tracking uses a limit of 30 iterations. If no acceptable result is obtained in 20 or 30 tries, the message *no convergence* is issued.

Hyperbolic tracking not possible: only 2 sound sources specified, using circular tracking.

Issued by 'uitraj.m' if hyperbolic method does not have the required three sources.

If there are fewer than two good sources, 'ls_converge.m' will report NOT ENOUGH VALID POINTS.

If ARTOA-II bogs down or behaves oddly during tracking, it is possible that a file has gotten corrupted. If there is no backup ".itm" file, you may need to re-extract the data. If messages regarding: "Index exceeds dimension" are seen, check the sizes of arrays by typing

>> whos global
Often this problem is caused because the "-cycle" record doesn't agree with the actual data. It is a good idea to exit the tracking session and ARTOA, type 'clear all' at the Matlab command line, and start again.

14. Completed Trajectories

The resulting track will be displayed in a new figure (Figure 9), using a square projection. "Track → Trajectory output" will produce the same figure. Each record tracked is represented by a dot. Every four days along the track a larger circle is labeled with the truncated Julian day (to modify this interval, change variable "dateint" at the beginning of 'uitraj.m'). Earlier tracks are gray (not visible in Figure 9); the latest track is blue. The launch and surfacing positions of the float are indicated by an open down-arrow labeled "Start" and a filled up-arrow labeled "End". The "best" trajectory is usually the one that comes closest to the "start" and "end". To exclude bathy-metry and coastlines, modify 'uitraj.m'.

Each tracking run for this float is listed on the upper right with the method used ("least square", e.g.). Whichever version is highlighted (default is the latest) will be affected by further selections.

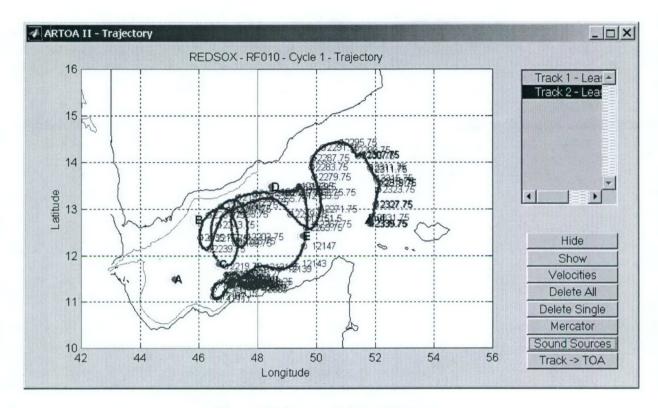


Figure 9: Trajectory window, with sources.

The options are:

- Hide highlighted track will no longer be visible (listed, preceded by (h))
- Show highlighted track will become visible
- Velocities creates a figure with time-series of zonal (cm/sec), meridional (cm/sec), and vertical (mm/sec) velocities. See Figure 10.
- Delete All wipes out all tracks (completely)
- Delete Single deletes highlighted track (completely)
- Mercator/Normal toggles between Mercator and square ("normal") projection
- Sound Sources changes scale as needed and displays sound sources used for the current trajectory as filled circles. Any other sources that are on the plot will be open circles (Figure 9). To remove sources, toggle Mercator/Normal button.
- Track → TOA place crosshairs over a questionable point ("zoom" feature will help); and left-click to mark it with an open circle. Left-click again to bring up the TOA-editing window. The TOAs with which that position was calculated are marked with open circles (Figure 11). You can pick the bad TOA and withdraw it (using "polygon"). Then hit "Track" again to rerun the improved data.

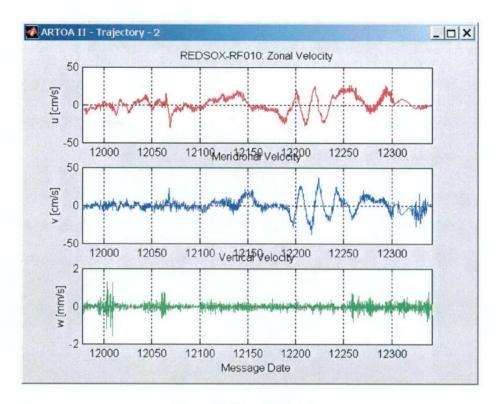


Figure 10: Plot of velocities.

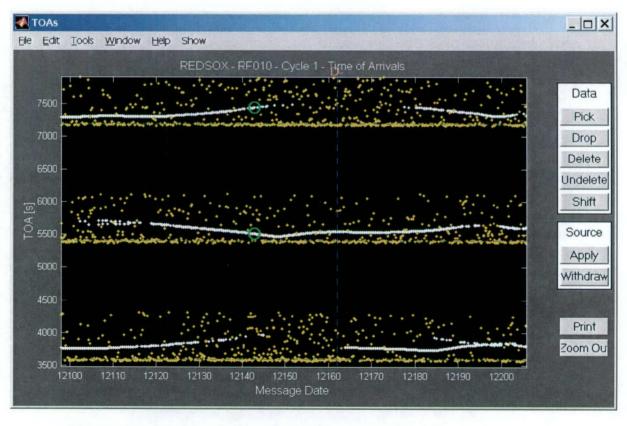


Figure 11: Magnified plot of Time of Arrivals, showing those used in a questionable point.

When you are satisfied with the highlighted trajectory in the trajectory output window, you can save it as the final product of ARTOA-II. Click on "File" in the ARTOA main toolbar and use the cascading menu as follows: File \rightarrow Save \rightarrow RFC File. It is also a good idea to save your work to an interim '.itm' file again at this time, and every time you go back to do further editing work on the float data.

File → Save → TRJ4 File

- → RFC File
- → Interim File
- "TRJ4 File" saves a single version of the track in a 5-column ASCII file, with a single header line, described in Appendix A.
- "RFC File" saves a single version of the track in an ASCII file, with header information, in a format described in Appendix A.
- "Interim File" will save all versions of the track, as well as the selected inputs. It also saves the Tracking Parameter information.

A file-selection window will open, listing any files with the output extension selected. Specify the filename wanted and hit the "Save" button in that window (or "Cancel").

Use File → Quit to close ARTOA-II. If you plan to track another float, be sure to "clear all" Matlab space before continuing.

IV. ACKNOWLEDGEMENTS

Financial support for this research program was provided by the Woods Hole Oceanographic Institution through Grant No. 32001601 from the George K. Moss Director's Discretionary Fund.

V. REFERENCES

Anderson-Fontana, S., P. Lazarevich, P. Perez-Brunius, M. Prater, T. Rossby, and H-M. Zhang, 2001. RAFOS Float Data Report of the Atlantic Climate Change Experiment (ACCE) 1997-2000. University of Rhode Island, G.S.O. Tech. Rept. 2001-4, 112 pp.

Boyer, T. P. and S. Levitus, 1994. Quality control and processing of historical temperature, salinity and oxygen data. NOAA Technical Report NESDIS 81:65.

Del Grosso, V.A., 1974. New Equation for the Speed of Sound in Natural Waters (with comparison to other equations). J.Acoust. Soc. Am., 56, 1084-1091.

Del Grosso, V.A., and C.W.Mader, 1972. Speed of Sound in Pure Water. J.Acoust. Soc. Am., 52, 1442-1446.

Levitus, S., T.P.Boyer, M.E. Conkright, T. O'Brien, J. Antonov, C. Stephens, L. Stathoplos, D. Johnson, and R. Gelfeld, 1998. World Ocean Database 1998 Volume 1: Introduction, NOAA Atlas NESDIS 18, U.S. Government Printing Office, Washington, D.C., 346 pp.

VI. GLOSSARY

- <u>checksum</u> The term "checksum" was created to describe early error detection techniques which used summing formulas and appended the result to the data. Checksum now has a moregeneral meaning, encompassing sophisticated algorithms such as the CRC (Cyclic Redundancy Code). The CRC algorithm treats the message as an enormous binary number, divides it by another fixed binary number, and makes the remainder the "checksum". The receiver can perform the same division and compare that remainder to see if the message was correctly received.
- <u>correlation height</u> the strength of the signal. Limits, depending on type of float, are specified in the rfb header.
- cycle (a) used by ARTOA-II to mean a float mission; this allows ARTOA-II to work on multiply-submerging floats (such as Marvor and ALFOS). (b) a complete set of listening operations (usually listening and stopping three times). Usually the same as line or record. See also phase.
- <u>drift</u> The amount by which a clock can be deduced to change over some time interval. Source clock drifts are quoted in seconds per interval between pongs. Float clock drifts are quoted in seconds per day (negative = fast).
- edit (a) to select the TOAs you want from all those available for a given float, (b) to correct your initial selections (of TOAs, temperature or pressure values).
- mission The amount of time a float was meant to stay submerged.
- offset (a) an amount by which a TOA for a given source or float is always off from the correct time, (b) a momentary difference between an instrument clock and the correct time. An "initial offset" (a) would always be applied. A "final offset" (b) would be combined with an initial offset and divided by the duration of the deployment to calculate the drift.
- <u>phase</u> Used by ARTOA-II in headers. Phase is used to mean a complete schedule of listening intervals. For example, "phases per cycle" means the number of listening intervals in the mission of a float. [This is to replace "cycle", now used to mean a descent and ascent.]
- schedule Hours between first pongs which has also been called "cycle" (q.v.)
- window (a) a figure on the screen, as in "an editing window", (b) a single interval, usually around 30 minutes, during which a float is listening for pongs.

VII. APPENDIX A: Description of input and output files for ARTOA-II

1. Input Files

The ARTOA-II configuration file

The '.ini' file is the main configuration file for the program. It connects the modules to the directory for each kind of file and its extension. If the program is not called with an alternative name, it will try to load the standard file called 'artoa.ini' which it expects in the same directory as the software.

Note: directory names are machine-dependent. The example below is from a UNIX machine. A sample directory from a PC might be: C:\data\tracktest\new_exp\

[files] soundsourcefile	/home/rafos/data/soso.d	
projectfile	/home/rafos/data/defaul	t.prj % location of the project file (not used yet)
[directory]		
session	/home/rafos/	% directory to store the current session
		(not used yet)
argos	/home/rafos/argos/	% directory to store the Argos files
header	/home/rafos/argos/	% directory to find header information
sts	/home/rafos/argos/	% directory to find/store status records
sfc	/home/rafos/argos/	% directory to find/store surface navigation
interim	/home/rafos/interm/	% directory to store the "itm" files
rfb	/home/rafos/interm/	% directory to store the "rfb" files
trj4	/home/rafos/final/	% directory to store the "trj4" files
		("simple rfc format")
rfc	/home/rafos/final/	% directory to store the "rfc" files
[filemask]		
session	*.sel	% filemask for the session files
		(not used yet)
argos	*.arg	% filemask for the Argos files
header	*.hdr	% filemask for the header files
sts	*.sts	% filemask for the status files
sfc	*.sfc	% filemask for the surface-navigation files
rfb	*.rfb	% filemask for the "rfb" files
itm	*.itm	% filemask for the "itm" files
rfc	*.rfc	% filemask for the "rfc" files
trj4	*.trj4	% filemask for the "trj4" files
[load]		
savesession	0	% not used yet
cycledelimiter	-	% filename delimiter for multi-cycle floats

The sound-source file

The sound-source file contains the parameters in key/value pairs. The source file consists of the following information for each source:

[SQ1]		% reference
-sourcename	SQ1	% name (should be the same as reference)
-sourcetype	WEBB	% type
-sourceowne	r IfM Kiel	% owner
-position	38.383 -19.021	% mooring position of the sound source
		(Latitude positive north; longitude positive east)
-depth	1000	% depth of the sound source (meters)
-begemis	1995 10 21 00 00	% deployment or "begin emission" (year, month, day, hour, min)
-endemis	1998 10 01 00 00	% retrieval or "end emission" (year, month, day, hour, min)
-offset	1995 10 21 0	% offset (year, month, day, offset in seconds)
		This is usually an initial offset.
-drift	0.034	% drift in seconds per pong-interval or "schedule"
-reftime	01 30	% pong time (hour, min)
-schedule	24	% hours between pongs
-signalleng	th 80	% time in seconds to complete correlation of source
-add_offset	NaN	% any additional constant offset in seconds
-sound_spee	d 1480	% sound velocity in meters per second

The source clock offset and source clock drift, if positive, will be subtracted from the TOA value; if negative, they will be added to the TOA value. This reflects the fact that a positive source clock offset means that the source clock shows a time in advance of GMT, therefore the TOA will be too long, and should be reduced by the time difference between the source clock and GMT. Similarly, a positive source clock drift, under this convention, indicates that the source clock is becoming faster.

ARGOS input file: .arg

Previously, Service Argos used only 20-bit ID's and you received 32 data bytes per message. If you wanted to check on data-transmission, you needed to include a checksum. In the new Argos messages, there is a CRC, and 28-bit ID's are permitted. In this format, if you are using a 20-bit ID, Service Argos will transmit 32 bytes of data. If you are using a 28-bit ID, you will have only 31 bytes in the data field. In the new Argos messages the CRC is calculated on the 4 bytes of hex address (0hhhhhhh) and 29 bytes of data.

Note in each case below that the first record is the Argos location record, containing program ID, PTT ID (decimal), record-count for this pass, number of variables, satellite ID (alpha), and – if available – quality code, date/time of location, latitude, longitude, altitude, and frequency (estima-ted transmission frequency). In samples a) and c), the observation times are reported to the thou-sandth of a second. This happens when "accurate time-coding" is requested from Service Argos. ARTOA-II can cope with either option.

a) Sample data from a 20-bit-ID float, no CRC (note location of 07FF in status message – record 2):

02294 24247 5 8 J 3 2002-08-31 13:42:10 12.888 54.606 0.000 401647240 2002-08-31 13:38:25.570 1 8843A83A 506F20AD 5D228334 C8F6118C

		D20B4419	2832143F	A09C2165	87040200
2002-08-31 13:41:32.573	1	6607FF02	6001F400	1C8A2D19	58656500
		402C02DA	2600335	1A00095E	A8596665

b) Sample data from a 28-bit-ID float with 20-bit identifier and CRC (note location of FF E0 in status message – record 1):

02683	25316 5	8 D 2 200	4-04-11	18:32:09	41.799	310.404 0.000	401650277
	2004-04-11	18:29:36	1	209DFF	E00C0300	D7200C0E	60496D6E
				2C0015	C230455	1E000F14	1E495F60
	2004-04-11	18:35:25	1	28BB8A	6D71529A	8CD34440	6A704506
			38	C61473	867E3481	83063237	7A2AD691

c) Sample data from a 28-bit-ID float with 28-bit identifier and CRC (note location of FFE0 in status message – record 1):

```
02683 37545
             5 8 K
  2004-08-03 22:30:49.422 1
                              E3F8FFE0
                                            C9500D7
                                                        FFFD5821
                                                                     63686800
                              2C00010C
                                           9501E91B
                                                        FFFD56CA
                                                                       636868
  2004-08-03 22:31:36.408 1
                              38F0001B
                                           1D7082E1
                                                         6D8E9B1
                                                                     D70836C7
                              5C20DB1D
                                           70837FEC
                                                        10800000
```

Main float file: rfbnnn.rfb / Header file: .hdr

The float parameters are given in key/value pairs. Service Argos uses "ptt" to stand for "platform transmitter terminal", or transmitter. ARTOA-II expects the "-floatname" to be five characters with the float number (nnn) in the last three; trouble creating an output file may be traced to this. **Note:** as described for the source file, a clock offset or drift that is "fast" will be expressed by a negative number.

```
% file name
rfb164.rfb
                                        % float name
-floatname RF164
                                        % float type (for DLD, must include 20 or 28)
                20-bit DLD
-type
-projectname EUROFLOAT
                                        % project name – See below for special use.
                                        % ptt decimal identifier
-pttdec
                12620
                                        % ptt hexadecimal identifier
-ptthex
                3f4b2
                                        % ptt repetition rate in seconds
-pttrep
                69
-launchpos 32.164 -22.022
                                                % launch position (lat, lon)
-launchtime 1995 10 13 12 00
                                                % launch date/time (year, month, day, hour, min)
                          -24.958
                                                % surfacing position (lat, lon)
-recoverpos 30.259
                                                % surfacing date/time (year, month, day, hour, min)
-recovertime 1996 01 28 02 30
                                                % offset at the beginning of the mission (year,
-offset
                1995 10 13 12 00 -60.9
                                        month, day, hour, min, offset in seconds)
-offset 1996 01 28 02 30 -82.6
                                                % offset at the end of the mission (year, month, day,
                                        hour, min, offset in seconds)
                                        % Second offset should be 0.00 for raw data – ARTOA-II will replace
                                        with derived offset.
            1 32.165 -22.022 1995 10 12 00 00 30.259 -24.958 1996 01 28 00 00
-cvcle
        % cycle information = beginning and end of the cycle (first and last listening phase)
        % (cycle number lat lon year month day hour min lat lon year month day hour min)
        % For example, the float above started its first listening phase the 12th of October 1995 at
        % midnight (00:00) and had its last listening phase the 28th January 1996 at midnight.
        % The positions at the beginning and the end are, for RAFOS floats, normally the same as
        % the launch and surface positions. Note: this does not exactly match the float turn-on time.
        % For Marvor floats they are the last/first reported Argos positions at the end/beginning
        % of each cycle.
                        1000
                                        % programmed depth
-progdepth
```

```
-progtemp
                      12
                                     % programmed temperature
-progsal
                      0
                                     % programmed salinity (not used yet)
-phasespercycle
                      300
                                     % number of phases per cycle (for RAFOS cycle and mission
                                     are the same thing)
                                     % listening schedule in hours (time between phases)
-schedule
                      24
                      CCCPCCCP
                                     %defines schedule of float for decoding (see below)
-field
                                     % seconds required for signal correlation
-signal length
                      80
-phasereftime
                      00 00
                                     % reference time (normally 00 00)
-windowsperphase
                                     % windows per listening phase (RAFOS record)
                      3
                                     % times of arrival per window
-toaperwindow
                      2
                                     % times of arrival stored at the end of one phase
-toaperphase
                             6
                                     (product of previous two variables)
                                     % range of the correlation heights (0 to 170 for DLD2)
-correlationrange 0 3
-windowrange
                             0 2
                                     % range of the window numbering (i.e., 3 windows)
                             30 60 90
                                            % minutes from the reference time to start of each window
-windowstart
-windowlength
                      25 25 25
                                     % length of each window (minutes)
-tempequation
                      1./(tc(1) +
                                     tc(2)*log(temp)) - 273.2 % formula for converting counts
                                     to temperature data (use "temp" if none)
                                             % the coefficients for the above
-tempcoeff
              0.001409
                           0.00027024001
                                     formula (use "1" if none)
                                            % formula for converting counts to
-presequationb pc(2)./pres - pc(1)
                                     pressure data (use "pres" if none)
              291.89001
                            1374300
                                            % the coefficients for the pressure (use "1" if none)
-prescoeff
                                     % comments (usually ship name)
-comment
              Poseidon
                                     Comment lines are unlimited - start each "-comment"
-edited by
              C Wooding
                                     % person who created header
-edited on
                                     % date created
              2000 11 14
                                     % total number of columns
-variables
              17
[VARIABLE LIST]
                                     % column number for the record-count
-line number
                      1
                                            % for times of arrival
                      3 5 7 9 11 13
-time of arrival
-correlation height
                         2 4 6 8 10 12
                                            % for correlation heights
              17
                                     % for pressure (engineering units)
-pressure
                                     % for temperature (engineering units)
-temperature
                      16
                                     % for pressure (raw counts) – not transmitted for DLD
-pres counts
                      14
-temp_counts
                      15
                                     % for temperature (raw counts) – not transmitted for DLD
[DATA]
                   40 10931
                                            40 4185 20 10691 4086 4086 2.950 818.80
  1 20 0 20 0
                                20
                                       18
  2 20 0 20 0
                   60
                        5713
                                40
                                     2825
                                           120
                                               3806 20
                                                           9861 4086 4086
                                                                              5.100
                                                                                     895.10
  3 20 0 20 0
                                                         12177 4086 4086 5.080 907.30
                  120
                        3397 100
                                     5642
                                            80
                                                3822 40
    20 0 20
                        5621
                                20 11026
                                           120 3871 40
                                                              18 4086 4086 5.134 909.00
                   80
897 20 0 20 0
                        9501
                                40
                                     7057
                                            60 5587 60 12346 4086 4086 5.270 913.90
                   60
898 20 0 20 0
                   60
                        9507
                                40
                                     1949 100 5599 40
                                                           8090 4086 4086 5.270 911.30
                  100
                        7090
                                      950
                                            80 5590 80 12349 4086 4086 5.270 914.60
899 20 0 20 0
                                60
900 20 0 20 0
                   40
                        9520
                                     1562
                                            80 5590 40
                                                              18 4086 4086 5.253 912.40
                                40
```

The data columns are: cycle or line number, window 1 (correlation 1, TOA 1 in deciseconds, correlation 2, TOA 2 in deciseconds), window 2 (as window 1), window 3 (as window 1), pressure counts (null value), temperature counts (null value), pressure, and temperature.

In order for ARTOA-II to work properly, each line of the rfb file must contain only a single set of windows. A float might be set up to store six windows in a day, three just after midnight, say, and three just after noon. ARTOA-II would plot this as six windows and there would be no way

to integrate the noon pongs with the midnight pongs. If this situation occurs, the user must reformat the data so that each line contains only the data from half a day.

Note: The rfb data file must start with line number 1 as the first line, and increase monotonically. ARTOA-II has been known to corrupt an rfb file – it is a good idea to have backup copies in another directory.

Header notes

"-field" describes the programming of the float. "D" indicates pressure and temperature recorded as two fields of 12 bits, with the pressure expressed in centibars and temperature in millidegrees C. "C" represents a field of 15 bits corresponding to the "-toaperwindow" highest correlation values collected during a listening window. The first 3 bits represent the amplitude on a scale of 0 to 7, and the next 12 bits the delay expressed in sample period. The sample period is .3075 sec for the 260-Hz receivers and .1846 sec for the 780-Hz receivers. ARTOA-II currently uses .3075 as the default (see 'newparse.m') but uses .1846 if the program name includes the letters "red".

Temperature and pressure coefficients and algorithms used to be required to calculate temperature and pressure from the raw counts. The pressure and temperature calculations are now done in the conversion software, before ARTOA-II is run, or, in the case of DLD floats, in the float itself. Therefore, the coefficients can still be included, but are not currently used. If the float didn't record temperature or pressure, use a column-number larger than the limit of the "-variables" value.

2. Output Files

Status messages rfnnn.sts

DLD floats produce a status message every ten messages, which contains information on the state of the instrument. It contains two separate fields. The first one contains data acquired at the time the burn wire was first activated; the second, data for the current time – the time of the Argos transmission. The first field contains message number (FFE0 or 07FF depending on type); day at release time; minutes (1 day = 1440 min), (seconds at release time), pressure in cBars, temperature in millidegrees, vacuum reading (0 to 100), controller battery voltage (dV), PTT battery voltage (dV), SYSTAT variable, STATUS variable, and total number of cycles acquired.

The second field contains the current day, minutes, and seconds; pressure in cBars, temperature in millidegrees, vacuum reading, controller battery voltage, and PTT battery voltage.

The SYSTAT variable contains a set of flags that report fault conditions. If more than one fault occurred, the following would be summed. The values in decimal are:

- 1 Clock module failed to address at least once
- 2 Receiver module failed to address at least once
- 4 PTMOD module failed to address at least once

- 8 Argos-transmitter module failed to address at least once
- 32 Low-battery fault condition
- 64 Surface fault condition
- 128 Too-deep fault condition

Example:

```
STATUS MESSAGES
```

Release day, min, sec, P, T, Vac, CBat, PBat, SyStat, Stat, NoCyc

Current day, min, sec, P, T, Vac, CBat, PBat

```
789: 1220: 0 856.8 14.970
                           88
                              102
                                   101
                                              64
                                                   44
                                                       730
              1.7 27.130
790: 171:14
                          89
                              102
                                   102
789: 1220: 0 856.8 14.970
                         88
                              102
                                   101
                                            64
                                                  44
                                                      730
790: 534:22
             1.6 27.257
                          89
                              102
                                   102
```

Surface navigation information rfnnn.sfc

The locations of the buoy on the surface are recorded in the WHOI legacy FLOATER format: The first three columns are program-identifier and the next three are buoy ID (provided by the Principal Investigator, not Service Argos). There are six digits of date (YYMMDD) and four digits of time. Latitude (north positive) and longitude (east positive) follow, and the last column is a quality code (1=low, 5=high).

Surface location example:

```
294227
        0301010534 14.194
                            50.466 1
294227
         0301010713 14.171
                            50.498 1
                            50.526 3
294227
        0301010857 14.150
        0301010931 14.145
                            50.538 3
294227
294227
         0301011109 14.114
                            50.560
294227
         0301011450 14.059
                            50.607
294227
         0301011451 14.058
                            50.610 5
```

Main float output file: rfcnnn.rfc

This is the commonly-used output format for the tracked data. Most header variables are explained by their labels. The sound source combinations are delimited by truncated Julian dates. (Julian days, called 'Message Date' during the earlier phases of processing, are now called 'Rafos days') .The reference position is usually the launch position. The sound velocities are taken from the sound source file, although a different method of determination may actually have been used. The line with a single asterisk, followed by an "l" is an additional comment line (it is vestigial - the launch date used to be required here). The velocities and header are calculated by 'svdata.m'.

```
** Float:
            RF022
** variables: InterpFlag LineNum RafosDay Temp Pres Lat Lon U V W
** Units: #
                                degC
                                        dbar
                                               deq
                                                      deq
                                                            cm/s cm/s
                                                                         mm/s
** Dummies: NA
                                                999
                                -9.99
                                       -999
                   NA
                         NA
                                                     999
                                                            999
                                                                    999
                                                                          999
** Cycle: 1
** Launch position (Cycle Start position): 9.179
                                                          -52.439
** Surface position (Cycle End position): 12.633
                                                         -52.287
** Cycle Start time: 1999 2 19 0 0 0 (RAFOS day ** Launch time: 1999 2 19 12 53 0 (RAFOS day 11229)
                                                         0 (RAFOS day 11229)
```

```
** Cycle End time: 2000 5 14 14 0
                                                                         0 (RAFOS day 11678.5833)
** First surface Position time: 2000 5 13 14 31 0 (RAFOS day 11678)
** Tracking method: Least Square
** Interpolation method: Spline
** Interpolation step size: 12 hours
** Interpolation gap size: 10
** Doppler correction: yes
** Sound source combinations: (rafos day, sound sources, reference position,
sound speed)
** 11229.5 to 11542: 69 77 B1 9.179

** 11542.5 to 11573.5: 69 77 185 9.179
                                                              -52.439 1.484
-52.439 1.484
                                                                                            1.484
                                                                                                          1.484
                                                                                                          1.484
                                                            -52.439 1.484
                                                                                            1.484
** 11574 to 11678.5: 69 404
                                           9.179
** Additional Float clock offsets, seconds (beginning, end): 0

      1
      11229.50
      7.622 -999.0
      9.184 -52.444

      2
      11230.00 -7.640 551.5
      9.260 -52.473

      3
      11230.50 7.519 542.0
      9.326 -52.462

      4
      11231.00 7.510 542.6
      9.348 -52.467

      5
      11231.50 7.655 552.4
      9.342 -52.482

      6
      11232.00 7.580 550.4
      9.338 -52.478

     1 11229.50 7.622 -999.0
                                                                           -10.35
                                                                                        19.63
                                                                                                  999.00
                                                                           -1.37
                                                                                        19.52
                                                                                                  999.00
                                                                              2.54
                                                                                        11.88
                                                                                                   0.14
                                                                             -4.17
                                                                                         0.61
                                                                                                    -0.19
-1
                                                                             -1.63
                                                                                        -2.13
                                                                                                    -0.09
     6 11232.00 7.580 550.4
                                                                              2.23
                                                                                         0.12
                                                                                                     0.00
```

The data columns are: quality flag, cycle or line number, "Rafos day" (truncated Julian day with decimal part), temperature, pressure, latitude, longitude, velocities (east, north, vertical). See units listed in the third header line, and "Dummies" or null values in the fourth line.

The quality flag, located in the first column, gives information about interpolation. If the flag is zero (0), then no points in the TOA records used to calculate this track location were interpolated. If the flag is a positive number, it corresponds to the number of interpolated sources used in computing this point.

The east and north velocities are calculated from the latitudes and longitudes, so they are influenced by the interpolation applied to the TOAs. The method is set by default to "spline" in the routine 'horvelo.m'; but it could be changed by altering 'uitc.m'. Method "spline" uses the function 'csape.m' from the Matlab Spline Toolbox (see Matlab documentation for more information). The location data is interpolated to two-hour intervals, and then resampled to the requested data rate. The vertical velocity is determined using a splined pressure record and the analytical derivative of the spline, as described for the north and east velocities. The first and last vertical velocities should be nulls. There will be no vertical velocity if a pressure value is missing, or if a portion of the trajectory can't be computed (bad geometry, *e.g.*), even if pressure and temperature are available. No interpolation is applied to temperature and pressure.

Simplified RFC file: nnn .trj4

TRJ file - extension ".trj4" - is an abbreviated format for the trajectory information. It has a single-line header (float and cycle number: "RF511 - cycle 1", *e.g.*) and saves the track in a 5-column ASCII file. Columns are truncated Julian day, latitude, longitude, pressure and temperature.

```
# RF023 - cycle 1
11229.50 9.217 -52.420 -999.0 5.10
```

11230.00	9.224	-52.499	907.3	5.08
11230.50	9.188	-52.574	909.0	5.13

11677.50	7.985	-47.197	911.3	5.27
11678.00	7.958	-47.201	914.6	5.27
11678.50	-999.000	-999.000	912.4	5.25

VIII. APPENDIX B: Description of related programs

1. Preparatory Program

Toalaunch.m is used before ARTOA-II is run when there is a problem identifying sound sources. It is particularly helpful when a sound source is deployed or recovered during a float mission, since ARTOA-II only identifies sources at the start and end of the mission (including delayed-start missions). Toalaunch uses the sound-source file and a file of float locations (called LSdata.dat) in the format:

```
[fltno ID launch-date lat lon surface-date lat lon]
563 25282 200402181324 45.362 -48.500 200404250517 40.909 -50.875
564 25316 200402181404 45.315 -48.467 200403090536 42.845 -49.473
```

It produces a file of estimates of Times of Arrival (in deciseconds) for launch (Lch) and surface (Sfc) locations of the floats in the file above:

```
flt#563 flt#564
sosoA Lch 6245.55 6248.99
Sfc 6583.08 6434.00
sosoB Lch 4418.29 4419.95
Sfc 4762.34 4599.81
sosoC Lch 11455.20 11453.62
Sfc 11663.09 11538.37
```

2. Plotting Programs

There are four main plotting programs: plotfloattrack.m, plotfloatprops.m, plotdisp....m, and plotvec_and_sosos.m. These programs are not part of the official ARTOA-II package and are run separately.

FUNCTION plotfloattrack(trackfile)

Function to plot up float track from the rfc*.rfc file, on top of bathymetry.

New 2-minute-interval or 1-minute-interval bathymetry must be prepared for each ocean-area download from GEBCO (http://www.ngdc.noaa.gov/mgg/gebco/gebco.html) or get the CD-ROM from http://www.ngdc.noaa.gov/mgg/fliers/01mgg04.html)

05 February 2000, H.H.Furey.

USAGE: plotfloattrack2('rfc346.rfc ')

CALLS: merc.m, lab geog.m, XXXbathmap.m ... needs data file XXXbath.mat in path.

INPUT: trackfile - name of track file, i.e., rfcnnn.rfc, IN SINGLE QUOTES.

NOTE: MAY want to edit the following constants defined in program;

"titletext" - plot title,

"tickint" - x- and y-axis labelling increment.

"labelrot" - rotation angle for date labels along track.

FUNCTION plotfloatprops(trackfile)

Function to plot up float properties: pressure, temperature, u-velocity, v-velocity, and u-v stick plot, using the data from the rfcnnn.rfc file. 04 Feb. 2000, H.H.Furey. 24 November 2000 CMW revises to get mission from header.

and read Artoa-II output (rfcnnn.rfc)

USAGE: plotfloatprops('rfc384.rfc ')

CALLS: pullfloatprops.m, high_calendar.m, gregor.m, scaled_stick.m, nanmin.m, nanmax.m (must be in path else edit line number 51).

INPUT: trackfile - name of track file, i.e., rfcnnn.rfc, IN SINGLE QUOTES.

NOTE: MAY want to edit the following constant defined in program; "div" - axis marker Width.

FUNCTION plotdispXXX;

Function to plot all float displacement vectors on bathymetry with sound sources (optional). 20 April 2000, H H. Furey.

11 July 2001 M Pacheco changed figure window to orient landscape

USAGE: plotdispXXX, where XXX denotes the experiment

CALLS: merc.m, lab_geog.m, XXXbathmap.m ... needs data files XXXbath.mat and XXX_LSdata.dat in path

NOTE: Will/may want to edit the following constants defined in program; name of data file where experiment's launch and surface data stored, currently XXX LSdata.dat.

"ax" - axis where vectors plotted.

"tickinc" - axis tick increment.

"sosofile" = name of source.dat file << This read source.dat - OOD

TO RUN:

CREATE XXX LSdata.dat, which has the following columns:

[fltno ID launch-date lat lon surface-date lat lon]
563 25282 200402181324 45.362 -48.500 200404250517 40.909 -50.875
564 25316 200402181404 45.315 -48.467 200403090536 42.845 -49.473

FUNCTION plotvec_and_sosos(fltnum,lims); plots with user-defined limits, plotvec_and_sosos(fltnum); plots extent of bathy data
Function to plot a single float displacement vector on bathymetry, with sound sources.
20 April 2000, H H. Furey.

USAGE: plotvec_and_sosos(384) - plots vec for float #384 also requires special launch/sfc file - as above

CALLS: merc.m, lab_geog.m, XXXbathmap.m ...

needs data files XXXbath.mat, XXX LSdata.dat, and source.dat in path

INPUT: fltnum - float number you wish to plot up.

lims - [west east south north], user defined limits, if this variable not entered, program

defaults to plotting all data in window.

NOTE: May want to edit the following constants defined in program;
Name of data file where experiment's launch and surface data stored,
currently XXX_LSdata.dat
Name of source file for experiment.
"tickine" - axis tick increment.

3. Other Programs

Ross2flt

Converts the output of ARTOA-II to the legacy Floater format. This is a Fortran program. The only input required is the full name of the input file. Any extensions after .rfc will be added to the extension of the resulting .pri file. The information in the header is lost, as is the quality coding, but the dates are Gregorian.

A number of plotting, smoothing, *etc.*, routines exist for Floater format, and it has been used for the ASCII data for the WOCE Subsurface Float Data Archive. These programs can be accessed at http://wfdac.whoi.edu.

02/2-101			
REPORT DOCUMENTATION PAGE	1. REPORT NO. WHOI-2005-02	2.	3. Recipient's Accession No.
Title and Subtitle RAFOS Float Processing	at the Woods Hole Oceanograp	hic Institution	5. Report Date January 2005 6.
Author(s)Christine M. Wood	ling, Heather H. Furey, and Margu	erite A. Pacheco	8. Performing Organization Rept. No. WHOI-2005-02
. Performing Organization Name an	nd Address		10. Project/Task/Work Unit No.
Woods Hole Oceanographic Woods Hole, Massachusetts			11. Contract(C) or Grant(G) No. (C) (G)
2. Sponsoring Organization Name	and Address		13. Type of Report & Period Covered
Woods Hole Oceanographic	Institution		Technical Report
			14.
15. Supplementary Notes This report should be cited	as: Woods Hole Oceanog. Inst. Tech.	Rept., WHOI-2005-02.	
	mort The MATIAD beard to	elina cofficer ADT	Service Argos to plotting the
ARTOA-II allows the udrifts, edit raw data, a	user to convert raw hexidecim and use the time–of–arrival da ovide a handy reference and	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the u drifts, edit raw data, a that this report will pr updates to the relevan	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the u drifts, edit raw data, a that this report will pr updates to the relevan	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the udrifts, edit raw data, athat this report will prupdates to the relevant updates to the relevant at the re	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the udrifts, edit raw data, at that this report will prupdates to the relevant updates to the relevant at the	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the udrifts, edit raw data, at that this report will prupdates to the relevant at the relevant	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the udrifts, edit raw data, a that this report will prupdates to the relevant updates to the relevant float processing software b. Identifiers/Open-Ended Terms	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. ormat, calculate float clock trajectories. The intention is
ARTOA-II allows the udrifts, edit raw data, a that this report will prupdates to the relevant updates to the relevant float processing software b. Identifiers/Open-Ended Terms c. COSATI Field/Group	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	acking software ART hal data to decimal f ata to calculate float it will be kept from	OA-II is described in detail. format, calculate float clock trajectories. The intention is becoming out-of-date by
ARTOA-II allows the udrifts, edit raw data, a that this report will prupdates to the relevant updates to the relevant float processing software b. Identifiers/Open-Ended Terms c. COSATI Field/Group 18. Availability Statement	user to convert raw hexidecimend use the time-of-arrival date of a handy reference and not webpages.	icking software ART nal data to decimal f ata to calculate float	OA-II is described in detail. format, calculate float clock trajectories. The intention is becoming out-of-date by

DOCUMENT LIBRARY

Distribution List for Technical Report Exchange - July 1998

University of California, San Diego SIO Library 0175C 9500 Gilman Drive La Jolla, CA 92093-0175

Hancock Library of Biology & Oceanography Alan Hancock Laboratory University of Southern California University Park Los Angeles, CA 90089-0371

Gifts & Exchanges Library Bedford Institute of Oceanography P.O. Box 1006 Dartmouth, NS, B2Y 4A2, CANADA

NOAA/EDIS Miami Library Center 4301 Rickenbacker Causeway Miami, FL 33149

Research Library U.S. Army Corps of Engineers Waterways Experiment Station 3909 Halls Ferry Road Vicksburg, MS 39180-6199

Marine Resources Information Center Building E38-320 MIT Cambridge, MA 02139

Library Lamont-Doherty Geological Observatory Columbia University Palisades, NY 10964

Library Serials Department Oregon State University Corvallis, OR 97331

Pell Marine Science Library University of Rhode Island Narragansett Bay Campus Narragansett, RI 02882

Working Collection Texas A&M University Dept. of Oceanography College Station, TX 77843 Fisheries-Oceanography Library 151 Oceanography Teaching Bldg. University of Washington Seattle, WA 98195

Library R.S.M.A.S. University of Miami 4600 Rickenbacker Causeway Miami, FL 33149

Maury Oceanographic Library Naval Oceanographic Office Building 1003 South 1002 Balch Blvd. Stennis Space Center, MS, 39522-5001

Library
Institute of Ocean Sciences
P.O. Box 6000
Sidney, B.C. V8L 4B2
CANADA

National Oceanographic Library Southampton Oceanography Centre European Way Southampton SO14 3ZH UK

The Librarian CSIRO Marine Laboratories G.P.O. Box 1538 Hobart, Tasmania AUSTRALIA 7001

Library
Proudman Oceanographic Laboratory
Bidston Observatory
Birkenhead
Merseyside L43 7 RA
UNITED KINGDOM

IFREMER
Bibliothèque La Pérouse
Centre de Documentation sur la Mer
15 rue Dumont d'Urville
Technopôle Brest-Iroise
BP 70 — 29280 Plouzané — FRANCE